

ALL PIPING AND WIRING TO BE IN ACCORDANCE WITH APPLICABLE STATE, LOCAL AND NATIONAL CODES & SHOULD BE APPROVED BY AHJ

TANK MOUNTED LUBRICATED COMPRESSORS INSTALLATION INSTRUCTIONS



MULTIPLE CHECK VALVES IN FEED LINES CAN RESULT IN LOWER SYSTEM PRESSURES DUE TO PRESSURE DROPS


IF SYSTEM IS FEEDING FREEZER ROOM OR AREA EXPOSED TO TEMPERATURES BELOW FREEZING. (SEE DRY AIR PAC INFORMATION)

CONNECT TO REQUIRED SYSTEM TRIM

200 F MAX.



P/N AMD - 1
AIR MAINTENANCE DEVICE

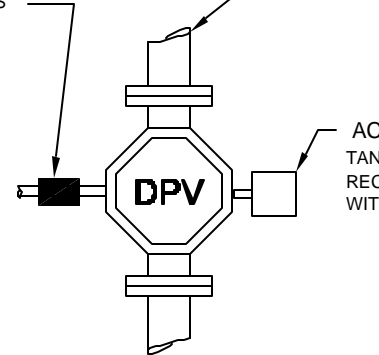

ACCELERATOR
TANK MOUNTED UNITS ARE RECOMMENDED FOR USE WITH ACCELERATORS

WARNING!
DO NOT INSTALL IN AREAS EXPOSED TO TEMPERATURES BELOW 40 DEGREES F. OR AREAS EXPOSED TO WEATHER. CONSULT FACTORY FOR WEATHERPROOF OPTIONS.

MOST MOTORS ARE MULTIPLE VOLTAGE. CHECK NAMEPLATE AND VERIFY INTERNAL CONNECTIONS FOR VOLTAGE BEING SUPPLIED TO UNIT.

INSTALL ALLOWING EASY ACCESS TO BELTGUARD FOR MAINTENANCE CHECKS

INTAKE CONNECTION INSTRUCTION SHEET G-203001

NOTE: UNITS ARE SHIPPED WITHOUT OIL INSTALLED. ADD OIL (P/N APC01Q) BEFORE OPERATING

1/2" MINIMUM, LARGER IF REQUIRED BY CODE

MAGNETIC STARTER RECOMMENDED (CONSULT APPLICABLE CODES)

PRESSURE SWITCH MUST BE WIRED IN CIRCUIT TO CONTROL COMPRESSOR.

PRESSURE SWITCH IS FACTORY SET AT 30# CUT IN 40# CUT OUT; HIGHER PRESSURE SETTINGS MAY REQUIRE A LARGER MOTOR ON THE COMPRESSOR, CONSULT FACTORY FOR DETAILS.


FLEX HOSE P/N P1202MP

MANUAL DRAIN RECOMMENDED AS MINIMUM.

OR

AUTOMATIC DRAIN (P/N FD-1) RECOMMENDED ON DRIP LEG TO REMOVE EXCESS WATER.

MANUAL DRAIN STANDARD; AUTOMATIC DRAIN (P/N DVA-2T) RECOMMENDED FOR HUMID AREAS.

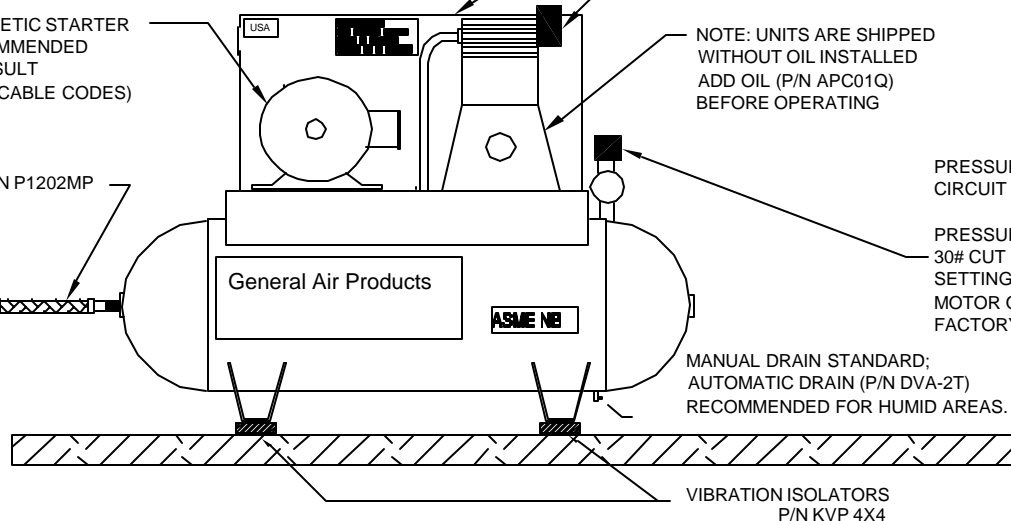

PART NUMBERS LISTED ARE FOR ACCESSORY ITEMS RECOMMENDED FOR COMPLETE INSTALLATION - CONSULT YOUR LOCAL DISTRIBUTOR FOR AVAILABILITY