



## **Riser Mounting Plate – Basic Instructions**

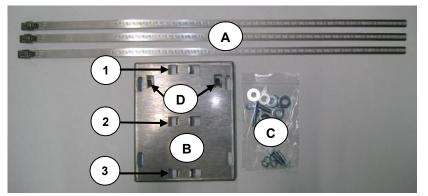

**RMK – Riser Mounting Kit Contents:** 

- A Mounting Straps: Each RMK comes with 3 mounting straps.
- **B Riser Mounting Plate**
- C Nuts, Bolts and Washers. Necessary for mounting.

★D - NEW – Compressor Hooks

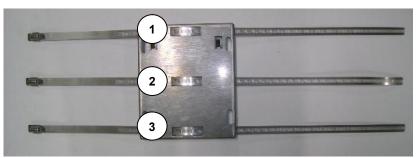

Bring the mounting strap in from the back side through the left hole, pass over the front of the plate and put the strap through the right. Repeat for straps **2** and **3**.

**Note:** Once you have threaded the straps into mounting plate we recommend that you mount the plate to the riser. Ensure the compressor hooks are on the top and that all three straps are tight against the riser (no slack).



After the mounting plate is properly mounted on the riser, secure the compressor to the plate using the compressor hooks to temporarily hold the compressor in place. Then use all four (4)nuts, washers and bolts to permanently mount the compressor to the plate. **Straps must be 90° angle to riser for proper installation.** 

## **IMPORTANT NOTES:**

- 1) Torque straps screws to 35 to 40 in lbs.
- 2) We highly recommend that the compressor is mounted to the riser with the discharge port is pointing down (as shown).
- 3) All four (4) bolts, washers and nuts supplied with the mounting kit must be used to secure the compressor to the plate. Failure to do so will void warranty.

## Remember, When in Doubt – Call the Experts 1-800-345-8207

118 Summit Drive, Exton PA 19341 (800) 345 8207 toll free - (610) 524 8965 fax - genairpro@generalairproducts.com www.GeneralAirProducts.com