



- 5. WIRE COMPRESSOR & PS-1PRESSURE SWITCH TO NITROGEN GENERATOR CABINET. THE MOTOR WIRES CONNECT TO CONTACTOR WITH OVERLOAD. SEE WIRING DIAGRAM.
- ALL WIRING SHOULD BE TO NEC AND APPLICABLE LOCAL STANDARDS.
- 7. DISCONNECT SWITCH SHOULD BE INSTALLED FOR COMPRESSOR.
- 8. PIPE CONDENSATE TO APPROPRIATE DISPOSAL LOCATION.

N:\Work\Engineering\Drawing File\Nitrogen Generators\Non-Certified Versions\NGP 1750, 2200\NGP 2200\DRAWINGS\G-215326 REV 1 GA, NGP-2200D 7.5 HP Compressor Package

APPROVALS DATE TITLE **NITROGEN GENERATOR** THIS DRAWINGAND ALL OF ITS CONTENTS ARE THE SOLE GENERAL ARRANGEMENT PROPERTY OF GENERAL AIR PRODUCTS, INC. DETAILS MAY CHECKED DIMENSIONS ARE IN INCHES 10/12/15 CHANGE WITHOUT NOTICE. THE CONTENTS OF THIS **MODEL NCP-2200D 7.5 HP** DRAWING, MAY NOT BE REPRODUCED OR INCORPORATED SCALE SIZE IN WHOLE OR IN PART IN ANY EQUIPMENT, NOR THE NONE В FRACTIONS DECIMALS ANGLES MANUFACTURE OF ANY PARTS, WITHOUT WRITTEN G-215326 1

2

