



## L Plus Series - Single Phase Base Mounted Air Compressors for Dry Pipe Sprinkler Systems



- Fan Type Compressor Pulley

Integral Air Filter
Enclosed Belt Guard

- Pressure Relief Valve

This base mounted air compressor is specifically designed to fill systems to 40 PSI in 30 minutes as per NFPA 13

- High Pressure Models Available
- NEMA Standard Multi-Voltage Motors
- Specially Formulated Compressor Oil Included
- 30" Stainless Steel Flex Hose (NEW)
- Vibration Isolation Pads (NEW)



System Capacity	Model	CFM @	Motor	Recommended	Dimensions			Weight	
(gal) +	Number	10 PSIG	HP	Wire Size ++	L	W	н	(lbs)	
200	L20033A	2.43	1/3	10	23	11	13	58	
290	L29050A	3.52	1/2	8	23	11	13	63	
365	L36575A	4.43	3/4	8	23	11	13	68	
425	L425100A	5.15	1	6	23	11	13	70	
620	L620100A	7.91	1	6	23	14	15	95	
900	L900150A	10.91	1 1/2	6	23	14	15	106	
1000	L1220200A	14.80	2	4	23	15	15	115	
1300	L1300300A	15.76	3	4	23	15	15	115	
1600	L1600300A	19.40	3	2	34	16	28	269	
2000	L2000500A	24.25	5	2	34	16	28	278	
2500	L2500500A	30.32	5	2	34	16	28	299	

#### Accessories:



Air Maintenance Device - Part # AMD-2 The AMD-2 is required for operation of all L Series Units. The AMD-2 is used for automatic operation in conjunction with a dedicated air compressor for the sprinkler system, such as base units.


Motor Line Starters - Thermal Overload Protection **Single Phase** 115V 208/230V Size Model 1/3 HP 1 HP 00 MG00A Maximum 1 HP 2 HP 0 MGX0A HP 2 HP 3 HP MG01A 1 3 HP 5 HP 1P MG15A


When Ordering a Motor Starter you <u>must</u> specify HP, Voltage and Phase that is supplied to the motor.

### Notes:

- + System Capacity based on 70°F system temperature.
- NOTE: A listed Air Maintenance Device must be installed in conjunction with all Tank Mounted air compressors.
- ++ Recommended Wire Sizes based on 100ft run. consult factory for longer or shorter runs.

VOLTAGE - All Single Phase Units: Up to 2 HP: 115/208-230 VAC / 3 to 5 HP: 208-230 VAC





## 1-800-345-8207



## L Plus Series - Single Phase Base Mounted Fire Protection Air Compressor Electrical Cut Sheet



This base mounted air compressor is specifically designed to fill systems to 40 PSI in 30 minutes as per NFPA 13



Model Number	Nominal HP	Factory Wired Voltage	Amperage (amps)			Recommended Wire Size Based on Run Length (gage)			
			Voltage	FLA	Start Up	25 FT	50 FT	100 FT	
L20033A	1/3	115	115	6.4	44.8	12	12	10	
			208	3	21	12	12	10	
			230	3.2	22.4	12	12	12	
	1/2	115	115	8.6	60.2	12	12	8	
L29050A			208	4.1	28.7	12	10	8	
			230	4.3	30.1	12	12	12	
	3/4	115	115	11	77	12	10	8	
L36575A			208	5.5	38.5	12	10	8	
			230	5.5	38.5	12	12	12	
	1	115	115	13.6	95.2	12	10	6	
L425100A			208	6.9	48.3	12	10	6	
			230	6.8	47.6	12	12	12	
	1	115	115	14.7	102.9	12	10	8	
L620100A			208	7.1	49.7	12	8	6	
			230	7.3	51.4	12	12	12	
	1 1/2	230	115	14.7	102.9	12	10	8	
L900150A			208	7.1	49.7	12	8	6	
			230	7.3	51.4	12	12	12	
	2	230	115	21	147	10	8	4	
L1220200A			208	11.3	79.1	10	8	4	
			230	10.5	73.5	12	12	10	
L1300300A	3	230	208	14	98	10	6	4	
			230	12.6	88.2	12	12	10	
L1600300A	3	230	208	17.4	121.8	8	4	2	
			230	16.8	117.6	12	12	10	
L2000500A	5	230	208	23	161	8	4	2	
			230	21	147	12	12	8	
L2500500A	5	230	208	23	161	8	4	2	
			230	21	147	12	12	8	

#### Note:

Wire sizes are based on maintaining 90% of the nominal voltage at starting amps. Starting amps are assumed to be 6 times the SFA. Warning:

Failure to consult with a licensed electrical professional can result in serious personal injury or death. Disconnect all power before servicing. Undersized wire between the motor and the power source will limit the starting and load carrying abilities of the motor causing motor overheating and permanent damage to the motor. Wire sizes listed are recommendations only - consult the National Electric Code (NEC) and any applicable local electrical safety codes. The NEC and GAP recommends a maximum voltage drop of 3%. Install motors and related equipment in accordance with the National Electrical Code (NEC) local electrical safety codes and practices. It is always the electrician's responsibility to determine and install a wire size that ensures motors can start and run well.




# **L Plus Series - Connection Diagram**



This base mounted air compressor is specifically designed to fill systems to 40 PSI in 30 minutes as per NFPA 13



### **System Layout**

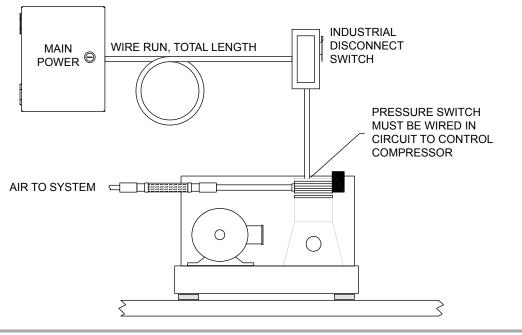

### **AMD-2 Required for Use**



#### Note:

Model AMD-2 Air Maintenance Device is used for automatic operation in conjunction with a dedicated fire protection air compressor that does not have a pressure switch installed. The AMD-2 is rated for 175 PSI.

### Warning:

Failure to consult with a licensed electrical professional can result in serious personal injury or death. Disconnect all power before servicing. Undersized wire between the motor and the power source will limit the starting and load carrying abilities of the motor causing motor overheating and permanent damage to the motor. Wire sizes listed are recommendations only - consult the National Electric Code (NEC) and any applicable local electrical safety codes. The NEC and GAP recommends a maximum voltage drop of 3%. Install motors and related equipment in accordance with the National Electrical Code (NEC) local electrical safety codes and practices. It is always the electrician's responsibility to determine and install a wire size that ensures motors can start and run well.