


# **Nitrogen Generator**

NGP-1000D-M2/M3

# Installation, Operation and Maintenance Manual

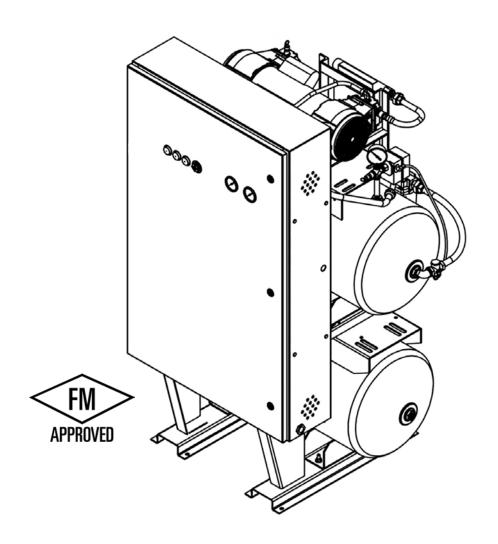

Call 1-800-345-8207

or visit our web site for our complete product listing

www.GeneralAirProducts.com



### **Table of Contents**

| Safety & Warnings                        | ection 1 |
|--|----------|
| System Overview                          | ection 2 |
| Before Going To The Job SiteSe           | ection 3 |
| Uncrating and Inspection                 | ection 4 |
| Installation of Nitrogen Generator       | ection 5 |
| WiringSe                                 | ection 6 |
| Standard Air Filling MethodSe            | ection 7 |
| Nitrogen Filling ProcedureSe             | ection 8 |
| Nitrogen Control ModuleSe                | ection 9 |
| Alarms/Troubleshooting                   | ction 10 |
| Nitrogen Generator Leak Check Method     | ction 11 |
| Air Side Leak Check MethodSed            | ction 12 |
| Nitrogen Membrane Check                  | ction 13 |
| Sprinkler System Leak CheckSec           | ction 14 |
| Maintenance                              | ction 15 |
| Normal Operating ParametersSec           | ction 16 |
| Nitrogen Analyzer InstructionsSec        | ction 17 |
| Wiring DiagramsSec                       | ction 18 |
| Technical Specifications and DrawingsSec | ction 19 |
| Warranty PolicySec                       | ction 20 |

If there are any questions regarding installation, operation, or maintenance of this compressor, please call 1-800-345-8207

IMPORTANT: ALL INFORMATION SUBJECT TO CHANGE WITHOUT NOTICE. Consult factory for the most up to date version of this manual - 1-800-345-8207.



# **Section 1 - Safety & Warnings**

This manual contains safety information that is important to know and understand. This information is provided for the safety of installers, operators, and users of the Nitrogen Generator. To help recognize this information, observe the following symbols.



Danger indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.



Warning indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury.



Caution indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.



Notice indicates important information, that if not followed may cause damage to equipment or property.

### **Important Notice to Users**

The Installation and Owner's Manual supplied with each unit must be read thoroughly and completely understood before installation and operation of the Nitrogen Generator. All appropriate safety standards for handling of gases as determined by local or national laws and regulations should be followed at all times.

### Unpacking

After unpacking unit, carefully inspect all parts and equipment for any damage that may have occurred during transit. Make sure to tighten fittings, bolts, etc. before putting unit into service.



Do not operate if damage occurred during shipping, handling, or use. Contact General Air Products immediately.

### **General Safety Information**

Important: Read all of the safety information in this manual before operating this equipment. Use of the equipment in a manner not specified within this manual may impair the protection provided by the generator and could result in an unplanned release of pressure, which may cause serious injury or damage. Only competent personnel, who have been trained, qualified, and approved by General Air Products should perform commissioning, servicing, and repair procedures.

When handling, installing, or operating this equipment, personnel must employ safe engineering practices and observe all related local regulations, health, and safety procedures, and legal requirements for safety.

Ensure that the equipment is depressurized and electrically isolated, before carrying out any of the scheduled maintenance instructions specified in this manual.



The warnings in this manual cover the most known potential hazards, but by definition cannot be all-inclusive. If the user employs an operating procedure, item of equipment, or a method of working that is not specifically recommended by General Air Products, the user must ensure that the equipment will not be damaged or become hazardous to persons or property.

Nitrogen is not a poisonous gas. However, in a concentrated form, there is a risk of asphyxiation. The generator produces a flow of nitrogen and oxygen enriched air which quickly disperses in the atmosphere. However, do not directly inhale the output gas from the outlet pipe.

The generator is classified as non-hazardous for transportation purposes and as non-flammable for fire regulations. This equipment is for indoor use only. Do not operate outdoors.



Operation of the nitrogen membrane separator above the rated design pressure may be hazardous. Do not connect it to compressed air sources that can exceed its maximum rated pressure without installing appropriate pressure controls and safety relief devices in the compressed air supply line.

Specific procedures must be developed for maintenance of the equipment on which the membrane separator is located. Appropriate labels must be continuously displayed in all areas where personnel might be exposed to a nitrogen atmosphere under normal or upset condition.



Do not attempt to disassemble the nitrogen membrane separator. Equipment damage may occur and cause the system to function incorrectly.



# **Section 2 - System Overview**

The Nitrogen Generator operates using membrane technology. The smaller oxygen and water vapor molecules can pass through (permeate) the membrane quickly. The larger nitrogen molecules are less likely to diffuse through the separator tubes; therefore, they continue downstream to the separator outlet. The permeated molecules are discharged to the atmosphere through a vent in the separator casing.

The Nitrogen Generator is specifically designed to provide clean, dry, high purity nitrogen for use in fire protection sprinkler systems. The generator is a fully assembled package ready to be connected to a new or existing fire sprinkler system using a factory pre-engineered air compressor. These turn-key systems include all air filtration equipment required to keep the generator operating at peak efficiency.

| Product Designation | Outlet Pipe Connections, NPS | Sprinkler System Capacity | Bypass Capacity (Gallon) |
|---------------------|------------------------------|---------------------------|--------------------------|
| NPG-1000D-M2        | 1/2                          | 3880                      | 925                      |
| NPG-1000D-M3        | 1/2                          | 6500                      | 925                      |

Figure 1: NGP-1000D M2/M3 System Diagram

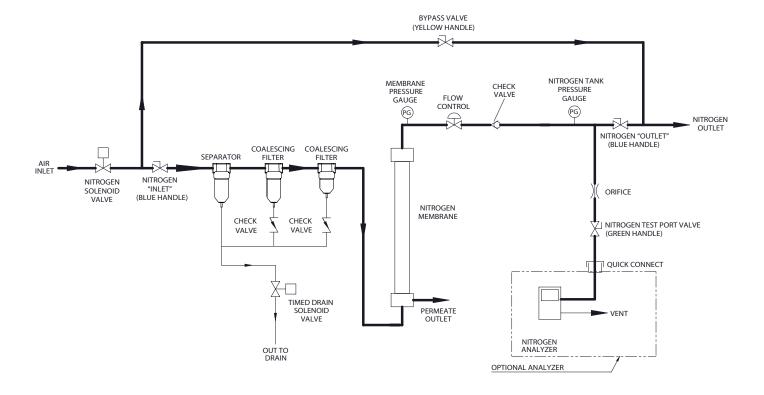


Figure 2: Typical NGP-1000D-M2/M3 External View


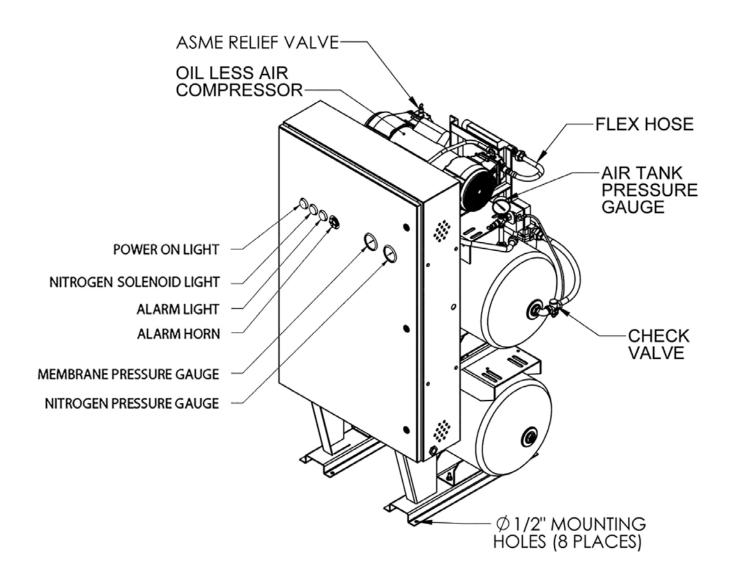


Figure 3: Typical NGP-1000D-M2/M3 Internal View



- 1. Nitrogen Membrane
- 2. Nitrogen Control Panel
- 3. Filter Drain Solenoid Test
- 4. Bypass Valve (Yellow Handle)
- 5. Nitrogen Tank Pressure Switch
- 6. Bypass Alarm Switch
- 7. Nitrogen "Inlet" Valve (Blue Handle)
- 8. Coalescing Filter

- 9. Coalescing Filter
- 10. Separator
- 11. Clean Out Valve on Strainer
- 12. Nitrogen Solenoid Valve
- 13. Air Tank Drain Solenoid Test
- 14. Nitrogen Test Port Valve (Green Handle)
- 15. Nitrogen "Outlet" Valve (Blue Handle)

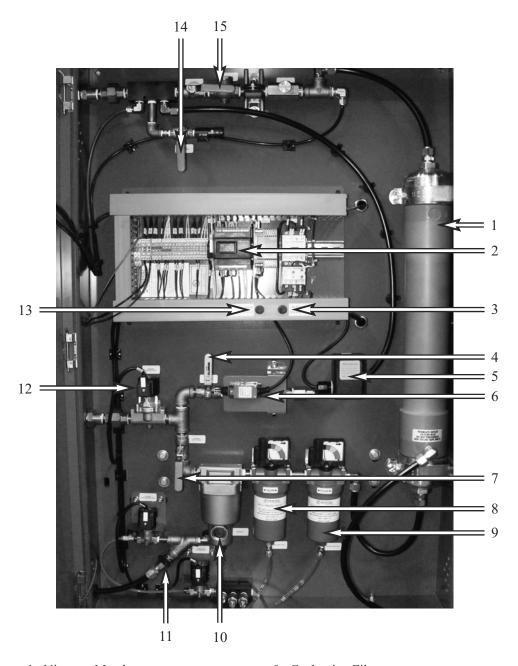

# **Section 3 - Before Going To The Job Site**

1. Find a location for the nitrogen generator to be installed meeting these requirements:

| Dimensions 62" x 44" x 33" (H x W x D)                      |  |  |
|---|--|--|
| Dry, clean, and well-ventilated                             |  |  |
| Ambient temperatures above 50° F at all times               |  |  |
| Access to front for service                                 |  |  |
| Conveniently located near fire sprinkler system connections |  |  |
| Conveniently located near drain                             |  |  |



The Nitrogen Generator creates a 30% to 40% oxygen stream which may pose a flammability problem in an oxygen-sensitive environment. Pipe per installation requirements and ensure the area surrounding the nitrogen generator is adequately ventilated. The Nitrogen Generator should always be installed in an adequately ventilated room. Nitrogen is nontoxic and largely inert. Rapid release of nitrogen gas into an enclosed space displaces the oxygen and can cause an asphyxiation hazard. Inhalation of nitrogen in excessive concentrations can result in unconsciousness without any warning symptoms.

2. Run a dedicated electrical circuit with an electrical disconnect switch to sprinkler room.

| Model           | Phase  | Amperage | Voltage |
|-----------------|--------|----------|---------|
| NGP-1000D-M2-2A | SINGLE | 11.6     | 208v    |
| NGP-1000D-M2-3A | SINGLE | 11       | 230v    |
| NGP-1000D-M2-2B | THREE  | 9.2      | 208v    |
| NGP-1000D-M2-3B | THREE  | 9.2      | 230v    |
| NGP-1000D-M2-4B | THREE  | 4.6      | 460v    |
| NGP-1000D-M3-2A | SINGLE | 11.6     | 208v    |
| NGP-1000D-M3-3A | SINGLE | 11       | 230v    |
| NGP-1000D-M3-2B | THREE  | 9.2      | 208v    |
| NGP-1000D-M3-3B | THREE  | 9.2      | 230v    |
| NGP-1000D-M3-4B | THREE  | 4.6      | 460v    |



# **Section 4 - Uncrating and Inspection**

- On arrival, do a full inspection by checking all packages and crates in the shipment for damage.
   If damage is found, sign for the damage or refuse the shipment. Contact the carrier immediately and file a shipping damage claim with the carrier.
- 2. Check to ensure all components are contained and no visible damage has occurred during shipping.



Important: Read all of the safety information in this manual before installing or operating this equipment.

#### **Crate Checklist:**

| ltem                                   |  |  |
|--|--|--|
| Nitrogen cabinet                       |  |  |
| Air storage tank (top tank)            |  |  |
| Nitrogen storage tank (bottom tank)    |  |  |
| Nitrogen membrane (inside cabinet)     |  |  |
| Manual (inside cabinet)                |  |  |
| 10 ft. 1/4" condensation drain tube    |  |  |
| Air Maintenance Device (One per riser) |  |  |
| Nitrogen Analyzer (One per job)        |  |  |
| 30" Stainless Steel Flex Hose          |  |  |
| Vibration Isolation Pads               |  |  |
| Floor Mounting Brackets                |  |  |






NGP-PSN2

3. Each nitrogen generator requires a minimum of one Air Maintenance Device (AMD) and one Inspectors Gas Analyzer Port (iGAP) per system. Check to see these components have arrived.

### **Required Accessories**

| Item                                |  |
|-------------------------------------|--|
| Inspectors Gas Analyzer Port (iGAP) |  |

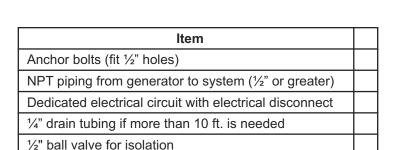





# **Section 5 - Installation of Nitrogen Generator**

- 1. Anchor the unit to a level surface using the ½" diameter holes on the floor mounting brackets. It is recommended practice to use the vibration isolation kit to prevent excess vibration.
- 2. Install a ½" ball valve at the nitrogen storage tank outlet connection. The nitrogen storage tank comes with one ½" female NPT connection located on each side. Choose the one that is most convenient. Plug the opposite tank connection. See Figure 4.
- 3. Close the ½" ball valve.
- 4. Install ½" NPT piping from ½" ball valve on the nitrogen storage tank to the sprinkler system Air Maintenance Device using standard accepted installation practices. A flex hose can be used to prevent excess vibration. Contractor Provided ½" NPT Ball Valve
- 5. Pipe the drain tube on the back of the nitrogen cabinet to drain.
- Install the second included drain tube at the separator located next to compressor aftercooler.
   NOTE: Tubing will need to be restrained as air pressure from the drain valve may cause the tubing to be displaced from the drain.
- 7. Install ½" NPT pipe (or larger) from the Air Maintenance Device (AMD) to the sprinkler system using standard accepted installation practices. Additional system components may be required. See Figure 5.

Contractor Provided
½" NPT Ball Valve

Figure 5




NOTE: AMD shown in closed position.



# Section 6 - Wiring of NGP-1000D-M2/M3


Wire the NGP-1000D-M2/M3. All wiring should be performed by a licensed electrician and conform to NEC and all applicable local standards. For wiring instructions refer to the Wiring Diagram. Wiring location is in the nitrogen cabinet. See Figure 6.

Figure 6

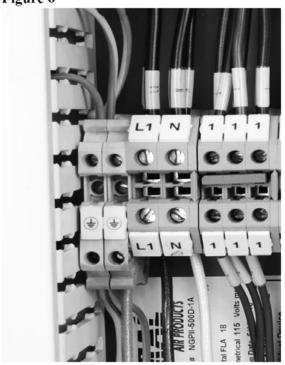

# **Section 7 - Standard Air Filling Method**

- 1. Before beginning, make sure the water supply to the sprinkler system is turned off.
- 2. Make sure all piping connections have been made according to installation instructions.
- 3. Close all Air Maintenance Device valves. If multiple AMDs are used, ensure all valves are in closed position.

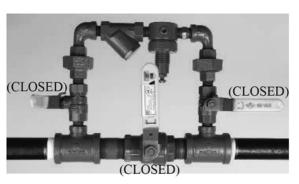

NOTE: AMD shown in closed position.

Nitrogen "Outlet" Valve

4. Open the Nitrogen cabinet.


5. Open the Bypass Valve (Yellow Handle).

6. Close the Nitrogen "Inlet" Valve (Blue Handle) and the Nitrogen "Outlet" Valve (Blue Handle).

7. Close the Nitrogen Test Port Valve (Green Handle).

8. Ensure the ball valve installed (by contractor) at the nitrogen storage tank outlet is closed. Also ensure air storage tank petcock and nitrogen storage tank petcock are closed.

> Bypass Valve // (Yellow Handle)

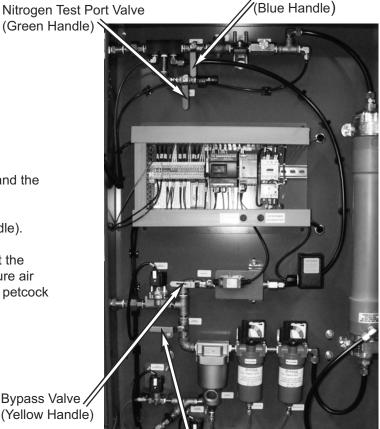

Nitrogen "Inlet" Valve (Blue Handle)



 Power the nitrogen generator system ON. The Power On light and the Nitrogen Solenoid light should turn green.
 See Figure 9

10. The nitrogen storage tank will fill to 75±3 PSI, then the nitrogen solenoid will close. The Nitrogen Solenoid light should now be off. See Figure 10.

11. The compressor will shut off at 105±3 PSI air storage tank pressure. This should take 11 minutes. See Figure 11.

12. Check all piping connections for leaks, as pre-plumbed piping may have loosened during shipping.


- 13. Using the installed petcock at the bottom of the air storage tank, relieve the pressure until the air compressor turns ON. The air compressor should turn on at 85±3 PSI. Close the petcock valve. See Figure 12.
- 14. The air compressor will run for 60 seconds. The air compressor will turn off at 105±3 PSI. If the unit takes longer than the prescribed time, or does not stop running when the unit reaches 105±3 PSI. Go to the Troubleshooting section.


Figure 9



Figure 10




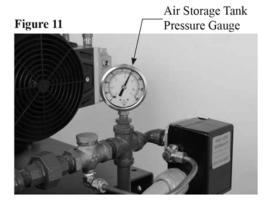

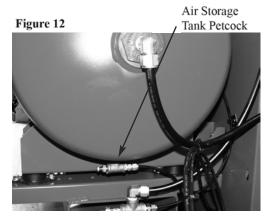

- 15. The nitrogen generator is now ready to fill the fire sprinkler system to the desired supervisory pressure.
- 16. Open the ball valve at the nitrogen storage tank outlet.
- 17. Open the Air Maintenance Device bypass valve to begin filling the sprinkler system. See Figure 13.

Figure 13

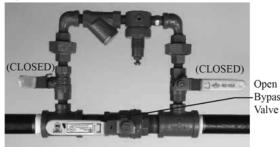

Bypass Valve

NOTE: AMD shown in bypass position



If there is more than one AMD on the system, then close the others. Fill one system at a time.

- 18. Allow the sprinkler system to reach the desired pressure. NOTE: This should finish in 30 minutes per the desired NFPA guidelines.
- 19. As soon as sprinkler system supervisory pressure is reached, put the sprinkler system back into service by placing the Air Maintenance Device in the maintenance position (refer to the air maintenance device manual for proper operation). See Figure 14.

Figure 14



Closed Bypass Valve

NOTE: AMD shown in maintenance position



If there is more than one AMD on the system, fill EACH system individually and repeat steps 15 through 19



# **Section 8 - Nitrogen Filling Procedure**

- 1. Once the system is at the desired supervisory pressure, it is time to start injecting nitrogen.
- 2. Close the Bypass Valve (Yellow Handle).
- 3. Open the Nitrogen "Inlet" Valve (Blue Handle).
- 4. Open the Nitrogen "Outlet" Valve (Blue Handle).

Nitrogen "Outlet" Valve (Blue Handle) Figure 15 Nitrogen Test Port Valve (Green Handle) - Su-Bypass Valve (Yellow Handle) Nitrogen "Inlet" Valve



(Blue Handle)

 Open the petcock on the nitrogen storage tank (bottom tank) and relieve the pressure until the Nitrogen Solenoid light turns ON. See Figure 16. The Nitrogen Solenoid light should turn on at 60±3 PSI on the nitrogen tank pressure gauge.

Figure 16

Nitrogen Storage Tank Petcock


- 6. The membrane pressure gauge should read between 85 and 105 PSI. See Figure 17.
- 7. Record the time it takes for the nitrogen storage tank to reach 75 PSI. It should typically take 14 minutes for the NGP-1000D-M2, and 8 minutes for the NGP-1000D-M3.

*NOTE:* The air compressor will cycle on and off during this process.

Figure 17

Neitrogen Solenoid Alarm Horn Alarm Pressure

8. When the nitrogen storage tank pressure reaches 75±3 PSI, the Nitrogen Solenoid light will turn OFF and the nitrogen membrane pressure will go to zero (0). See Figure 18.

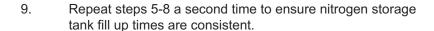

- 10. On the second cycle, open the Nitrogen Test Port Valve (Green Handle) located on the inside of the cabinet.
- Turn on the Nitrogen Analyzer. See Figure 19. For more information on the Nitrogen Analyzer go to Nitrogen Analyzer Instructions.
- 12. Attach the Nitrogen Analyzer to the Nitrogen Test Port.
- 13. The nitrogen purity level reading should climb to 98%+. If not go to Troubleshooting.
- Close the Nitrogen Test Port Valve (Green Handle) and dis connect the Nitrogen Analyzer. Make sure to power off the Nitrogen Analyzer.
- 15. Do not leave the Nitrogen Test Port Valve (Green Valve) open for more than 2 minutes. The purity level may drop and fill times will be lengthened.
- 16. The system is now in operation.

Figure 18

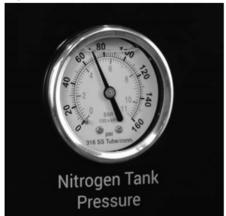


Figure 19





# **Section 9 - Nitrogen Control Module**

The Nitrogen Control Module is a built in PLC used to control the nitrogen generator and provide useful information on alarms, compressor operating hours, cycles and nitrogen solenoid operation.

Normal operation does not require any operator input. The display should read "Nitrogen Generator Normal" unless the generator is in alarm or log display mode. To access the panel flip the casing up.

### **PLC Operation**

To view the log display information:

- Press the Alt Key and then Press the down arrow. Press the Alt Key again.
- Use the UP and DOWN arrow key to scroll through the log screens below.
- To get out of the log press ALT then up arrow, and press ALT again to get to main display

Compressor Hours and Cycle Screen




Alarm 1 and 2 Counts Screen



Alarm 5 and 6 Counts Screen



Nitrogen Control Module Screen

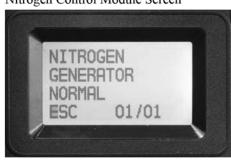

Nitrogen Solenoid Hours and Cycle Screen



Alarm 3 and 4 Counts Screen



Alarm 7 Counts Screen






# **Section 10 - Nitrogen Generator Alarms/Troubleshooting**

The nitrogen generator has 7 alarms. If an alarm is activated, the alarm light will turn red on the outside of the cabinet and the Alarm Horn will sound. The alarm number will also display on the Nitrogen Control Module inside the cabinet.

Alarm Horn Silencer

To clear alarms, cycle power or press ALT then hold the right arrow key for 5 seconds. Press ALT again to get back to main menu. There is also a silence button on the back of the Alarm Horn.

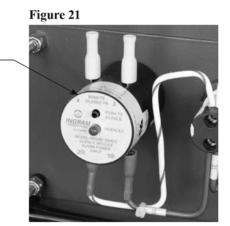

### Alarm 1 - Nitrogen Solenoid Excess Cycles

**Issue:** The nitrogen solenoid has cycled more than 36 times in 12 hours.

NOTE: More than 8 cycles a day will reduce membrane life below 10 years.

#### Answer:

- 1. If the nitrogen solenoid is ON, check the pressure on the nitrogen storage tank. It should be below 80 PSI. If the pressure is greater than 80 PSI, the pressure switch may need re-adjustment or replacement.
- 2. Check the nitrogen generator system for leaks.
- Check the sprinkler system for leaks.

### Alarm 2 - Bypass Alarm

**Issue:** The nitrogen generator has been left in Bypass Mode (Air Fill) for over 1 hour. This alarm clears when the unit has been placed in Nitrogen Mode. It is designed to prevent the unit from being inadvertently left in Bypass Mode.

#### Answer:

- 1. Turn the Bypass Valve (Yellow Handle) to the OFF position. Open the Nitrogen "Inlet" Valve (Blue Handle) and the Nitrogen "Outlet" Valve (Blue Handle). Refer to Nitrogen Filling Procedure.
- 2. If the unit is filling multiple systems, or being left intentionally in Bypass Mode, mute the Alarm Horn by pressing the button on the inside of the cabinet on the back of the Alarm Horn.

#### Alarm 3 - Compressor Overload

**Issue:** The control panel has tripped due to a motor overload.

### Answer:

- 1. Turn power OFF to the nitrogen generator.
- Check overload setting.
- 3. Reset the thermal overload located at the bottom of the compressor contactor. Measure amperage of motor check for excessive amp draw.

#### Alarm 4 – Excessive Air Compressor Run

**Issue:** The air compressor has run for longer than 45 minutes continuously.

### Answer:

- 1. Check the pressure in the air storage tank. If the pressure is greater than 105 PSI and the compressor is still running it could indicate a pressure switch issue.
- 2. Check the nitrogen generator system for leaks.

### Alarm 5 - Compressor Fail To Start

Issue: Contactor auxiliary contacts did not close.

#### Answer:

- 1. Troubleshoot contactor wiring and functionality. See alarm 4.
- 2. Replace contactor.



#### Alarm 6 - Compressor Excess Cycles

**Issue:** Air compressor has cycled more than 36 times in 3 hours.

#### Answer:

- 1. The unit is running more frequently than normal. Check to ensure all valves in the cabinet are in correct position.
- 2. Check the nitrogen generator system for leaks.
- 3. Check the sprinkler system for leaks.

#### Alarm 7 - Excessive Nitrogen Solenoid Runtime

Issue: Nitrogen Solenoid has been open for over 6 hours.

#### Answer:

- 1. If the Nitrogen Solenoid light is ON, check the pressure on the nitrogen storage tank. The pressure should be below 75±3 PSI. If the pressure is greater than 75±3 PSI, the pressure switch may need re-adjustment or replacement.
- 2. Check the nitrogen generator system for leaks.
- 3. Check the sprinkler system for leaks.

#### Issue: The air compressor does not turn on.

#### Answer:

- 1. Ensure the power disconnect switch is in the ON position and properly wired.
- 2. Check the pressure gauge on the air storage tank. (Note: The nitrogen generator system will not turn on unless the pressure is below 85±3 PSI.)
- 3. Make sure all valves are open or closed where necessary.
- 4. Check for alarms.

#### Issue: The air compressor takes too long to fill.

#### Answer:

- Confirm all valves are in the correct position. When filling the sprinkler system ensure the Bypass Valve
  (Yellow Handle) is OPEN. Trying to fill the sprinkler system through the membrane will result in long fill times and
  possibly damage to the compressor. See Standard Air Filling Method for operation on how to fill the sprinkle system.
- 2. Check the nitrogen generator system for leaks.
- Check the sprinkler system for leaks.


### Issue: There is water in my drain hose.

### Answer:

Press the Filter Drain Solenoid Test Button on the inside of the cabinet to test if the drain is working.

# Issue: Nitrogen membrane pressure is lower than 80 PSI (when the Nitrogen Solenoid light in ON). Answer:

- 1. Ensure all the ball valves are in the correct position for Nitrogen Mode, go to Nitrogen Filling Procedure.
- Adjust the needle valve on the inside of the cabinet to 98% nitrogen. See Figure 22.
  - *NOTE:* Nitrogen storage tank needs to be at 60±3 PSI when adjusting needle valve. Also, the air storage tank should be above 80 PSI.
- 3. Check membrane pressure. It should be between 85 and 105 PSI.
- Close Nitrogen Test Port Valve (Green Handle).

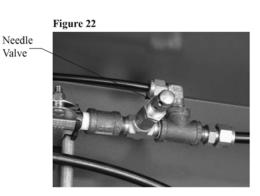



# Section 11 - Nitrogen Generator Leak Check Method

- 1. First isolate the nitrogen generator from the fire protection system, by closing the ball valve located on the outlet of the nitrogen storage tank. If no ball valve was installed, close the AMD valves installed between the sprinkler system and the nitrogen generator.
- 2. Record the time the nitrogen generator was isolated and the sprinkler system supervisory pressure. This will be used to determine if there is a leak on the sprinkler system side.
- 3. Power OFF the nitrogen generator.
- 4. In the cabinet, open the Bypass Valve (Yellow Handle).
- 5. Close the Nitrogen "Inlet" Valve (Blue Handle) and the Nitrogen "Outlet" Valve (Blue Handle).
- 6. Close the Nitrogen Test Port Valve (Green Handle).
- 7. Exhaust all the gas by using the petcock on the bottom of the air storage tank.
- 8. Exhaust all the gas by using the petcock on the nitrogen storage tank.
- 9. Power ON the nitrogen generator. The Power On light on the outside of the cabinet should turn green.
- 10. Allow the pressure in the air storage tank and the nitrogen storage tank to rise. The green Nitrogen Solenoid light should be ON.
- 11. Once the air compressor and Nitrogen Solenoid light have both turned off, record the pressure on the air storage tank and the nitrogen storage tank. This should typically take 7 minutes for the NGP-1000D-M2/M3.
- 12. Let the nitrogen generator sit for 30 minutes. The air compressor or the Nitrogen Solenoid light should NOT turn on during this time.
- 13. Recheck the air storage tank and nitrogen storage tank pressures. The pressure should not change.
  - a. If there is a pressure drop the nitrogen generator has a leak. Soap the fittings in the unit and retighten any fittings that are loose.
  - b. If there is no pressure drop, this indicates there is a leak on the sprinkler system side. Return to the sprinkler system to see if there has been a pressure drop on the system during troubleshooting. Fix sprinkler leaks before putting the nitrogen generator back into service.



### **Section 12 - Air Side Leak Check Method**

- 1. First isolate the nitrogen generator from the fire protection system, by closing the ball valve located on the outlet of the nitrogen storage tank. If no ball valve was installed, close the AMD valves installed between the sprinkler system and the nitrogen generator.
- 2. Record the time the nitrogen generator was isolated and the sprinkler system supervisory pressure. This will be used to determine if there is a leak on the sprinkler system side.
- 3. Power OFF the nitrogen generator.
- 4. Isolate the Air Side section by closing both the Bypass Valve (Yellow Handle) and the Nitrogen "Inlet" Valve (Blue Handle).
- 5. Exhaust all the gas by using the petcock on the bottom of the air storage tank. The air storage tank pressure gauge should read zero (0).
- 6. Power the nitrogen generator ON. The Power On light should be green.
- 7. Allow the pressure to build to 105±3 PSI. Make note the time it takes to reach this pressure. This should typically take less than 5 minutes for the NGP-1000D-M2/M3.
- 8. If the unit reaches 105±3 PSI and does not stop, this could indicate a pressure switch issue.
- 9. If the unit reaches 105±3 PSI and stops:
  - a. Record the exact pressure.
  - b. Allow the system to sit for 30 minutes. Recheck the pressure gauge to see if the unit has lost any pressure.
  - c. If pressure is lost, soap piping connections and retighten any loose fittings.
  - d. If no pressure is lost, go to Nitrogen Generator Leak Check Method.
  - e. If the unit reaches 105±3 PSI and stops but it took longer than 5 minutes and no leaks are found contact tech support.
- 10. If the unit cannot reach 105±3 PSI, soap unit for leaks.



# **Section 13 - Nitrogen Membrane Check**

- 1. First isolate the nitrogen generator from the fire protection system, by closing the ball valve located on the outlet of the nitrogen storage tank. If no ball valve was installed, close the AMD valve installed between the sprinkler system and the nitrogen generator.
- 2. Record the time the nitrogen generator was isolated and the sprinkler system supervisory pressure. This will be used to determine if there is a leak on the sprinkler system side.
- 3. Close the Bypass Valve (Yellow Handle).
- 4. Open the Nitrogen "Inlet" Valve (Blue Handle) and the Nitrogen "Outlet" Valve (Blue Handle).
- 5. Exhaust the gas in the nitrogen storage tank by using the petcock on the bottom of the tank until the nitrogen storage pressure is 60±3 PSI and the Nitrogen Solenoid light turns ON.
- 6. Quickly close the petcock.
- 7. Record the time it takes for the Nitrogen Solenoid light to turn off.
  This should typically take 14 minutes for the NGP-1000D-M2 and 8 minutes for the NGP-1000D-M3.
- 8. Check the membrane pressure gauge, it should be between 85-105 PSI.
- 9. Open the Nitrogen Test Port Valve (Green Handle).
- 10. Using a portable nitrogen analyzer check the nitrogen purity. The purity should read 98% or greater when the pressure in the nitrogen storage tank reads at least 60±3 PSI.

# Section 14 - Sprinkler System Leak Check

If no leak could be found in the nitrogen generator and the unit reaches its desired pressures in the allotted time, this indicates the sprinkler system has a leak larger than the unit can handle in nitrogen generating mode. Isolate the fire sprinkler system and see if the pressure drops. Nitrogen Generators are designed for 1.5 PSI leak over 24 hours per NFPA 13's new system leak rate, unless specified otherwise.

To keep system in service the unit can run in Bypass Mode while arrangements are made to fix sprinkler system leaks. Note the unit will alarm if left in Bypass Mode for longer than 1 hour. This can be silenced by pressing the button on the back of the Alarm Horn. A LED will light on the back of the Alarm Horn. If the alarm is reset, the light will go out, and the Alarm Horn will sound if another alarm occurs.



### **Section 15 - Maintenance**

# **WARNING**

All pressure must be relieved from the entire nitrogen generator system BEFORE servicing. To avoid system damage and/or personal injury, the nitrogen generator should be isolated from the compressed air supply and the generator systemfully depressurized before any maintenance or service is performed. All maintenance and troubleshooting activities for the Nitrogen Generator should be performed by qualified personnel using reasonable care. Before servicing, isolate all risers by closing all AMD valves and relieving all system pressure from the Nitrogen Generator. Failure to do so could result in serious injury or death.

The Nitrogen Generator features durable components and construction for long-lasting value, reliable performance, and require little maintenance.

| Schedule Maintenance Table            |                            |  |
|---------------------------------------|----------------------------|--|
| Part Frequency                        |                            |  |
| Coalescing Filters                    | Annually                   |  |
| Nitrogen Purity Analyzer              | Sensor Battery as Required |  |
| Pressure Settings Inspected Quarterly |                            |  |

| Air Compressor Maintenance Schedule |  |  |  |
|-------------------------------------|--|--|--|
| Weekly                              | <ul> <li>Drain condensate from receiver and traps</li> <li>Check for unusual noise or vibration</li> <li>Clean air filters (only with non-petroleum based products)</li> <li>Clean all external parts of the compressor and motor</li> </ul> |  |  |
| Monthly                             | <ul><li>Manually test safety relief valve</li><li>Inspect air system for leaks</li><li>Tighten fittings, nuts and screws as required</li></ul>   |  |  |
| Quarterly                           | Change Intake filter element   |  |  |

| Replacement Parts                                     |                         |  |  |
|---|-------------------------|--|--|
| Part  | Replacement Part Number |  |  |
| MAINTENANCE KIT - M2-M5                               | NGP-MK                  |  |  |
| AIR MAINTENANCE DEVICE                                | AMD-1                   |  |  |
| NITROGEN ANALYZER                                     | NGP-PSN2                |  |  |
| SENSOR ELEMENT  | F/NGP                   |  |  |
| VIBRATION KIT   | NGP-VAK-30              |  |  |
| OIL-LESS MINOR REPAIR KIT(1 PER CYL)                  | OLP-MRK-2.75            |  |  |
| CYLINDER REPAIR KIT (1 PER CYL)                       | OLP-CRK-2.75            |  |  |
| SOLENOID VALVE-AIR TANK DRAIN, FILTER DRAIN           | G-04F25C2               |  |  |
| OIL-LESS COMPRESSOR INTAKE FILTER ELEMENT (1 PER CYL) | OLP-IFK1                |  |  |
| MEMBRANE - M2   | NGP-M2                  |  |  |
| MEMBRANE - M3   | NGP-M3                  |  |  |




### Filter Replacement

To replace the filters in the generator cabinet:

- 1. Isolate the nitrogen generator and relieve pressure.
- 2. Disconnect the power to the nitrogen generator.
- 3. Disconnect drain hose from bottom of filters. Unscrew the bowl from the filter body. See Figure 23.
- 4. Remove the element by unscrewing the filter. See Figure 24.
- 5. Clean the filter body and bowl with a clean rag.
- 6. Replace the filter elements using filters provided in the replacement kit.
- 7. Check for leaks.



Figure 36

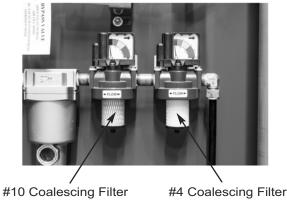

### **Air Compressor Replacement**

- 1. Isolate the nitrogen generator and relieve pressure.
- 2. Disconnect the power to the nitrogen generator.
- 3. Disconnect wires in junction box on the air compressor.
- 4. Loosen union after flex hose on compressor discharge.
- 5. Remove flex hose from compressor discharge.
- 6. Remove bolts holding compressor to rubber isolation mounts.
- 7. Install new air compressor.
- 8. Verify wiring in motor junction box corresponds to the input voltage.
- 9. Power the generator.
- 10. Check for proper rotation on 3 phase Compressors.
- 11. Check for leaks.



# **Section 16 - Normal Operating Parameters**

The Nitrogen Generator System uses a two tank system design to deliver high purity nitrogen to the fire protection system. The pressure switch on the air storage tank controls the air compressor by turning it on and off at the desired pressure set points. Another pressure switch on the nitrogen tank controls the nitrogen solenoid valve on the inside of the cabinet. Whenever the nitrogen storage tank requires nitrogen, the nitrogen solenoid valve opens allowing air to come from the air storage tank. Once the nitrogen storage tank reaches the desired set point the nitrogen solenoid closes.

- Periodic (typically less than 10 times an hour) running of the air compressor is expected.
- Periodic (typically less than 12 times a day) opening and closing of the nitrogen solenoid is expected.
- When the nitrogen solenoid valve is closed, the membrane pressure gauge will read "0".
- The automatic drain valve automatically releases condensate from the unit.

*NOTE:* These are typical durations. Actual times may be slightly longer or shorter. These are typical pressure set points. Actual pressure can be ±3 PSI.

| Operational State  | NGP-1000D-M2 | NGP-1000D-M3 | Recorded Parameter |
|--|--------------|--------------|--------------------|
| Air Compressor OFF Pressure  | 105 PSI      | 105 PSI      |                    |
| Air Compressor ON Pressure   | 85 PSI       | 85 PSI       |                    |
| Time Interval to build pressure from 85 PSI to 100 PSI in air storage tank                 | 1 minute     | 1 minute     |                    |
| Nitrogen Solenoid OFF Pressure (Nitrogen Tank Pressure)                                    | 75 PSI       | 75 PSI       |                    |
| Nitrogen Solenoid ON Pressure<br>(Nitrogen Tank Pressure)                                  | 60 PSI       | 60 PSI       |                    |
| Time Interval to build pressure from 60 PSI to 75 PSI in air tank storage in Bypass Mode   | 2 minutes    | 2 minutes    |                    |
| Time Interval to build pressure from 60 PSI to 75 PSI in air tank storage in Nitrogen Mode | 14 minutes   | 8 minutes    |                    |



# **Section 17 - Nitrogen Analyzer Instructions**

| Component   | Description   |  |
|---|---|--|
| The 3 ½ digit liquid crystal display (LCD) provides direct readout of nitrogen concentrations in the range of 0 - 105.0% (100.1% - 105.0% used for calibration determination purposes). The digits also display error codes and calibration code necessary. |   |  |
| Low Battery Indicator   | dicator The low battery indicator is located at the top of the display and is only activated when the voltage on the batteries is below a normal operating level. |  |
| % Symbol  | The "%" sign is located to the right of the concentration number and is present during normal operation.  |  |
| Calibration Symbol  | The calibration symbol is located at the bottom of the display and is timed to activate when a calibration is necessary.  |  |
| ON/OFF Key  | This key is used to turn the device on or off.  |  |
| Calibration Key   | This key is used to calibrate the device. Holding the key for more than three seconds will force the device to enter a calibration mode                           |  |

#### **Automatic Calibration**

After the unit is turned on, it will automatically calibrate to room air. The display should be stable and reading 79.1%. To check the nitrogen concentration of a sample gas: (after the unit has been calibrated)

- 1. Connect the Tygon tubing to the bottom of the analyzer by threading the barbed adapter onto the oxygen sensor.
- 2. Attach the other end of the sample hose to the sample gas source and initiate flow of the sample to the unit at a rate of 1-10 liters per minute. 2 liters per minute is recommended.
- 3. Using the ON/OFF key, make sure the unit is in the power "ON" mode.
- 4. Allow the nitrogen reading to stabilize. This will take approximately 30 seconds or more.

### Calibrating the N2 Analyzer

Calibrate the N2 analyzer upon initial power-up. Thereafter, Maxtec® recommends calibration on a weekly basis. To serve as a reminder, a one week timer is started with each new calibration. At the end of one week a reminder icon appears on the bottom of the LCD. Calibration is recommended if the user is unsure when the last calibration procedure was performed, or if the measurement value is in question.

With compressed air (79.1% N2), new calibration is required when:

- The measured N2 percentage in 79.1% N2 is above 80.1% N2
- The measured N2 percentage in 79.1% N2 is below 78.1% N2
- The CAL reminder icon is blinking at the bottom of the LCD

A simple calibration may be made with the sensor open to static ambient air.

### **Calibration Errors and Error Codes**

The nitrogen purity analyzer has a self test feature built into the software to detect faulty calibrations, oxygen sensor failures, and low operating voltage. Refer to the following table for an explanation of error codes and possible actions to take.



| Code           | Meaning                                 | Corrective Action   |
|----------------|---|---|
| E02            | No sensor attached                      | Open the hand held nitrogen purity analyzer and disconnect and reconnect sensor. Unit should perform an auto calibration and should read 79.1%. If not, contact Customer Service for possible sensor replacement.   |
| E02            | No valid calibration data available     | Make sure unit has reached thermal equilibrium. Press and hold the Calibration Button for three seconds to manually force a new calibration.  |
| E02 or ED4     | Battery below minimum operating voltage | Replace batteries.  |
| CAL Err St: O2 | Sensor reading not stable               | Wait for displayed nitrogen reading to stabilize, when calibrating the device at 100% oxygen. Wait for unit to reach thermal equilibrium (Please note that this can take up to one half hour, if the device is stored in temperatures outside the specified operating temperature range). |
| CAL Err lo     | Sensor voltage too low                  | Press and hold the Calibration Button for three seconds to manually force a new calibration. If unit repeats this error more than three times, contact Customer Service for possible sensor replacement.  |
| CAL Err hi     | Sensor voltage too high                 | Press and hold the Calibration Button for three seconds to manually force a new calibration. If unit repeats this error more than three times, contact Customer Service for possible sensor replacement.  |
| CAL Err Bat    | Battery voltage too low to recalibrate  | Replace batteries.  |

### **Changing the Batteries**

When the batteries need to be changed, the device will indicate this in one of two ways:

- 1. The battery icon on the bottom of the display will begin to flash. This icon will continue to flash until the batteries are changed. The unit will continue to function normally for approx. 200 hours.
- 2. If the device detects a very low battery level, an error code of "E04" will be present on the display, and the unit will not function until the batteries are changed.

To change the batteries, begin by removing the three screws from the back of the device. A #1 phillips screwdriver is required to remove these screws. Once the screws are removed, gently separate the two halves of the device. The batteries can now be replaced from the back half of the case. Be sure to orient the new batteries as indicated in the embossed polarity on the back case. *NOTE:* If the batteries are installed incorrectly the batteries will not make contact and the device will not operate. Carefully, bring the two halves of the case together while positioning the wires so they are not pinched between the two case halves. The gasket separating the halves will be captured on the back case half. Reinsert the three screws and tighten until the screws are snug. The device will automatically perform a calibration and begin displaying % of oxygen.

HELPFUL HINT: If unit does not function, verify that the screws are tight to allow proper electrical connection.



### **Changing the Oxygen Sensor**


Should the oxygen sensor require changing, the device will indicate this by presenting "Cal Err lo" on the display after initiating a calibration.

To change the oxygen sensor, begin by removing the three screws from the back of the device. A #1 Phillips screwdriver is required to remove these screws. Once the screws are removed, gently separate the two halves of the device. Disconnect the oxygen sensor from the printed circuit board by pressing the unlock lever first and then pull the connector out of the receptacle. The oxygen sensor can now be replaced in the back half of the case.


HELPFUL HINT: Be sure to orient the new sensor by aligning the red arrow on the sensor with the arrow in the back case. A small tab is located on the back case that is designed to engage the sensor and prevent it from rotating within the case. NOTE: If the oxygen sensor is installed incorrectly, the case will not come back together and the unit may be damaged when the screws are reinstalled. Reconnect the oxygen sensor to the connector on the printed circuit board. Carefully bring the two halves of the case together while positioning the wires to ensure they are not pinched between the two case halves. Make sure the sensor is fully inserted and in the proper orientation. Reinsert the three screws and tighten until the screws are snug. Verify the unit operates properly. The device will automatically perform a calibration and begin displaying % of oxygen.



# **Section 18 - Wiring Diagrams**

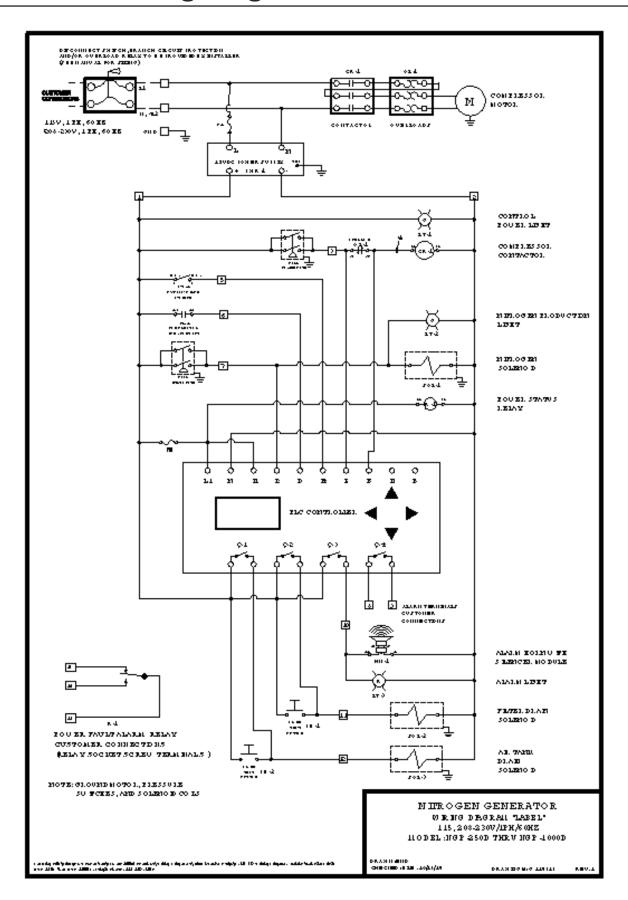



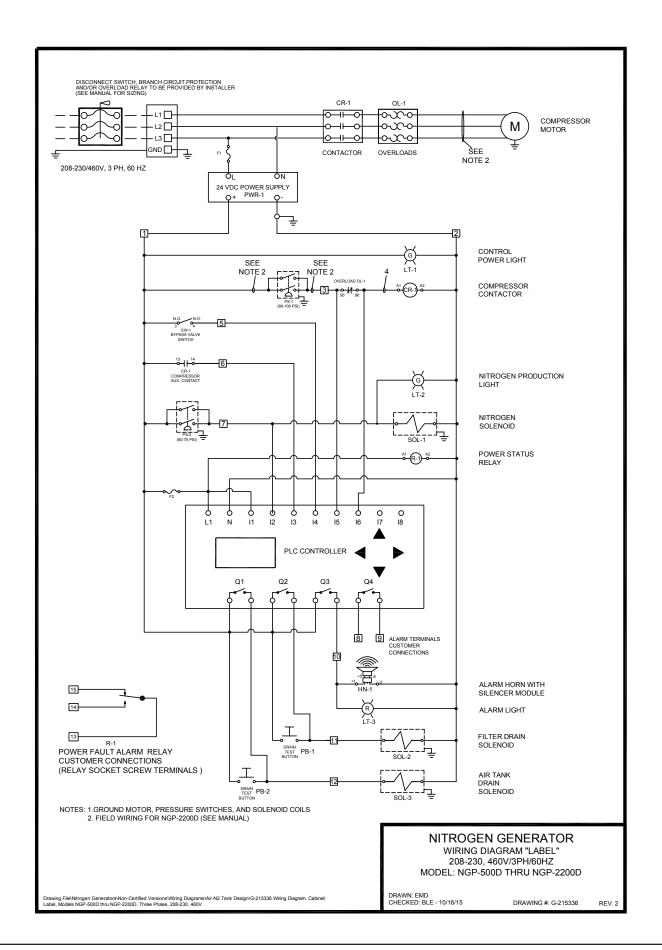


# **Section 19 - Technical Specifications and Drawings**

#### NGP-1000D-M2

| Size (HxWxD)                        | 62" x 44" x 33"   |
|-------------------------------------|---|
| Weight                              | 550 lbs   |
| Power Supply                        | Available in 208V (11.6A), 230V (11A), single phase and 208V (9.2A), 230V (9.2A), 460V (4.6A) three phase |
| Fire Sprinkler System<br>Connection | 1/2" Female NPT   |
| Mounting Holes                      | 1/2"  |
| Outlet Pressure                     | 60-75 PSI   |
| Temperature Range                   | 50°F (10°C) to 110°F (43°C)   |

#### NGP-1000D-M3

| Size (HxWxD)                        | 62" x 44" x 33"   |
|-------------------------------------|---|
| Weight                              | 550 lbs   |
| Power Supply                        | Available in 208V (11.6A), 230V (11A), single phase and 208V (9.2A), 230V (9.2A), 460V (4.6A) three phase |
| Fire Sprinkler System<br>Connection | ½" Female NPT   |
| Mounting Holes                      | 1/2"  |
| Outlet Pressure                     | 60-75 PSI   |
| Temperature Range                   | 50°F (10°C) to 110°F (43°C)   |

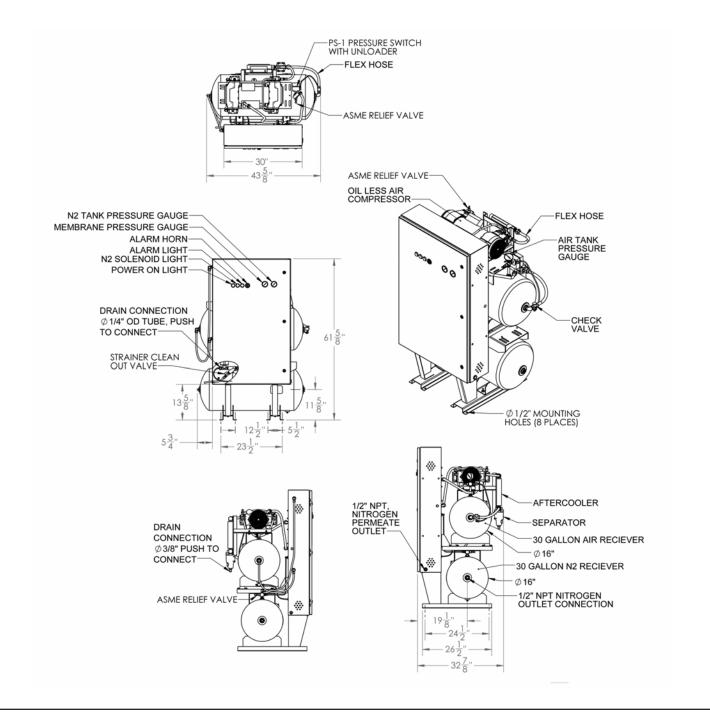



# **Section 20 - Warranty Policy**

#### **GENERAL PROVISIONS & LIMITATIONS**

General Air Products, Inc. (the "Company") warrants to each original purchaser ("Purchaser") of its new products from the Company or its Authorized Distributor that such products are, at the time of delivery to the Purchaser, made with good materials and workmanship. No warranty is made with respect to:

- Any product, which has been repaired or altered in such a way, in the Companies judgment, as to affect the product adversely.
- Any product, which has, in the Companies judgment been subjected to negligence, accident, improper storage, improper installation or application.
- Any product, which has not been operated or maintained in accordance with the recommendations of the Company.
- Components or accessories manufactured, warranted and serviced by others.
- 5. Any reconditioned or prior owned product.

Claims for items described in 4. above should be submitted directly to the manufacturer of the component or accessory.

#### WARRANTY PERIOD

The Company's obligation under this Warranty is limited to repair or, at its option, replacing during normal business hours at the designated facility of the Company, any part that in its sole judgment proved not to be as warranted within the applicable Warranty Period as follows.

#### **COMPONENTS**

All non-consumable components are warranted for 12 months from the date of purchase or 18 months from date of manufacture, which ever occurs first. Consumables are not covered under warranty. The unit must have been installed by either a factory authorized distributor or agent in accordance with the factory recommendations taking into account all other local site conditions not originally noted to the factory. The unit must be operated and maintained in accordance with the Factory recommendations and original design conditions. Failure to provide such proof of the above may void warranty.

#### LABOR TRANSPORTATION & INSPECTION

The Company will repair or replace any product or part thereof which in the Company's sole judgement is defective in material or workmanship. Labor costs are not covered under warranty.

All costs of transportation of product, labor or parts claimed not to be as warranted and, of repaired or replaced parts to or from factory shall be borne by purchaser. The Company may require the return of any part claimed not to be as warranted to one of its facilities as designated by the Company, transportation prepaid by Purchaser, to establish a claim under this warranty.

Replacement parts provided under the terms of the warranty are warranted for the remainder of the Warranty Period of the product upon which installed to the same extent as if such parts were original components, or for 90 days whichever is longer.

#### **DISCLAIMER**

THE FOREGOING WARRANTY IS EXCLUSIVE AND IT IS EXPRESSLY AGREED THAT, EXCEPT AS TO TITLE, THE COMPANY MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED OR STATUTORY, INCLUDING ANY IMPLIED WARRANTY OR MERCHANTABILITY.

THE REMEDY PROVIDED UNDER THIS WARRANTY SHALL BE THE SOLE, EXCLUSIVE AND ONLY REMEDY AVAILABLE TO THE PURCHASER AND IN NO CASE SHALL THE COMPANY BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES. UNDER NO CIRCUMSTANCES SHALL THE COMPANY BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOSSES OR DELAYS HOWSOEVER CAUSED.

No statement, representation, agreement, or understanding, oral or written, made by any agent, distributor, representative or employee of the Company which is not contained in this Warranty will be binding upon the company unless made in writing and executed by an officer of the Company.

This warranty shall not be effective as to any claim which is not presented within 30 days after the date upon which the product is claimed not to have been as warranted. Any action for breach of this warranty must be commenced within one year after the date upon which the cause of action occurred.

Any adjustment made pursuant to this warranty shall not be construed as an admission by the Company that any product was not as warranted.

#### PROMPT DISPOSITION & RETURNS POLICY

The Company will make a good faith effort for prompt correction or other adjustment with respect to any product, which proves to be defective within the warranty period. Before returning any product, write or call the distributor, agent or authorized company from which the product was purchased, describing defect and giving date and number of original invoice, a well as proof of Factory supplied consumables and proof of scheduled maintenance. No products will be accepted for return without the Company issuing a "Returned Goods Authorization" (RGA) to the Purchaser and unless accompanied by a properly authorized RGA request form initiated by the Purchaser. Return freight must be prepaid and each returned product must have the RGA number clearly marked on the product. Title and risk of loss pass to buyer upon delivery to the common carrier.

#### PRODUCT SUITABILITY

Many States, Localities and Countries have codes and regulations governing sales, construction, installation, and/or use of products for certain purposes, which may vary from those in neighboring areas. While General Air Products, Inc. attempts to assure that its products comply with such codes, it cannot guarantee compliance, and cannot be responsible for how the product is installed or used. Before purchase and use of a product, please review the product application, and national and local codes and regulations, and be sure that the product, installation, and use will comply with them.

General Air Products, Inc.

118 Summit Drive Exton, PA 19341 P: 610-524-8950

F: 610-524-8965